

07-18 JEEP WRANGLER JK 10th Anniversary Hood



CAUTION BEFORE INSTALLING

Before installation - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

E-mail: tech@calliert4x4.com

CALLIERT is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.** •


Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

- Name of purchase location
- Bar Code on side of box

INSTALLATION **MANUAL**


1

10th Anniversary Hood

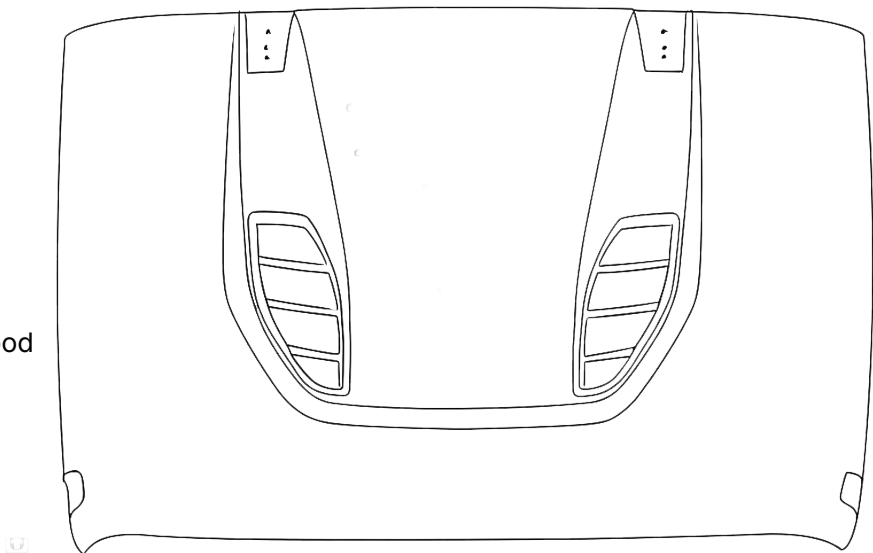

2

Insulating cotton

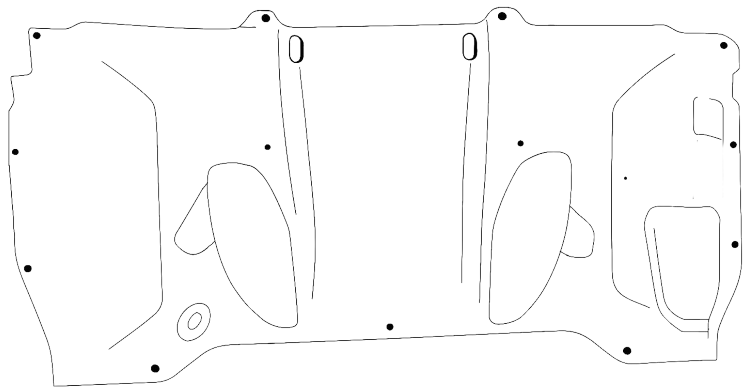

3

Heat vents



4

Bumper blocks



a.



6mm
Bumper Clips Car Hole Plastic Rivets **x13**

b.




3M gluer **x1**

INSTALLATION MANUAL



Open the hood, disconnect the washer fluid hose, close the hood, remove the hinge screws, and detach the hood from the vehicle .

INSTALLATION **MANUAL**

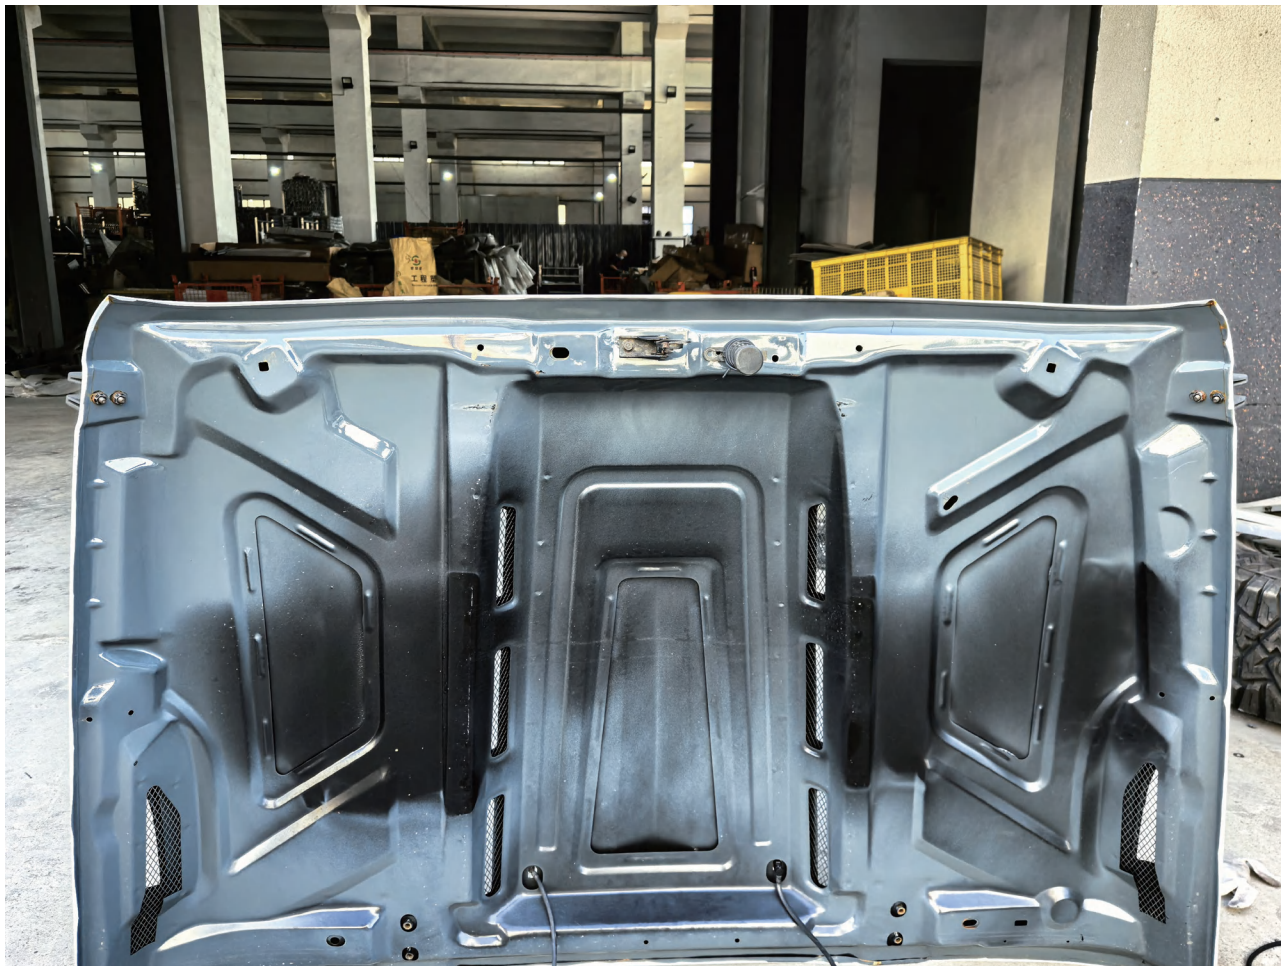

As shown in the diagram, remove all boxed components.

INSTALLATION **MANUAL**



As shown in the diagram, install the original vehicle components onto the new hood.




INSTALLATION MANUAL



As shown in the diagram, install the original vehicle components onto the new hood.

INSTALLATION MANUAL

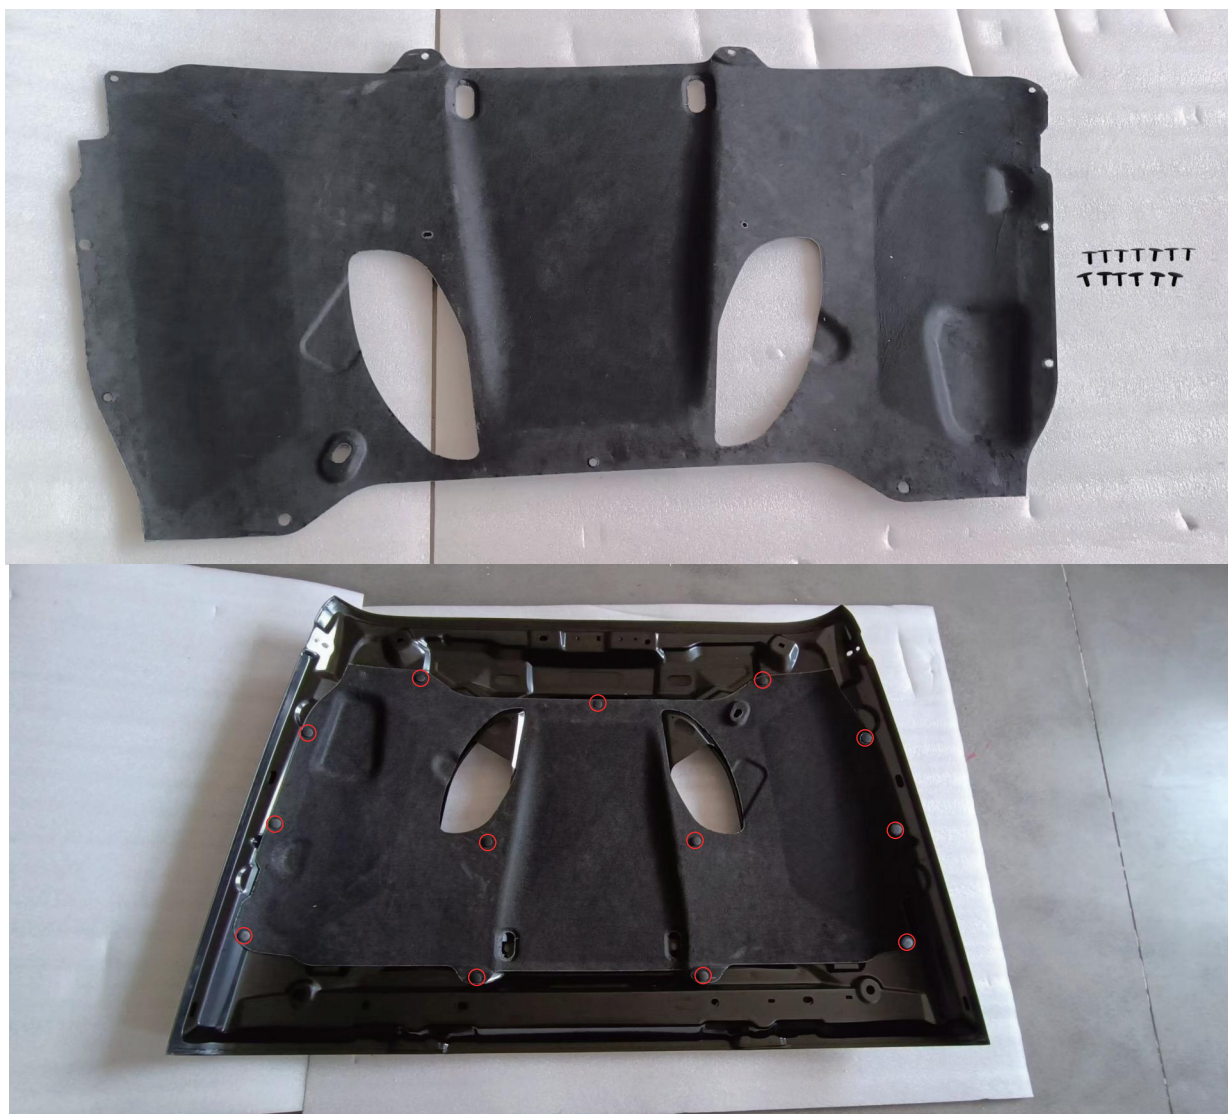

Prepare the required parts (②*1, a*13).

As shown in the diagram, secure component ② to the hood using a at the red-circled holes..



CALLIART

INSTALLATION MANUAL



Prepare the required parts (③*2, ④*2, b*1),
as shown in the diagram, bond b to ③, mount ③ onto the hood,
then install ④ to the hood at the red-circled holes.

INSTALLATION MANUAL



Position the hood onto the vehicle body,
connect the coolant hose, and secure the hinges to the hood using the OEM screws.



CALLIART

INSTALLATION **MANUAL**



Installation completed.

CALLIERT